



Updating MTC firmware


1. Save the latest Application (.irb) file to your PC or USB drive.
2. From the controller or web browser go to System Maintenance->Firmware Update.

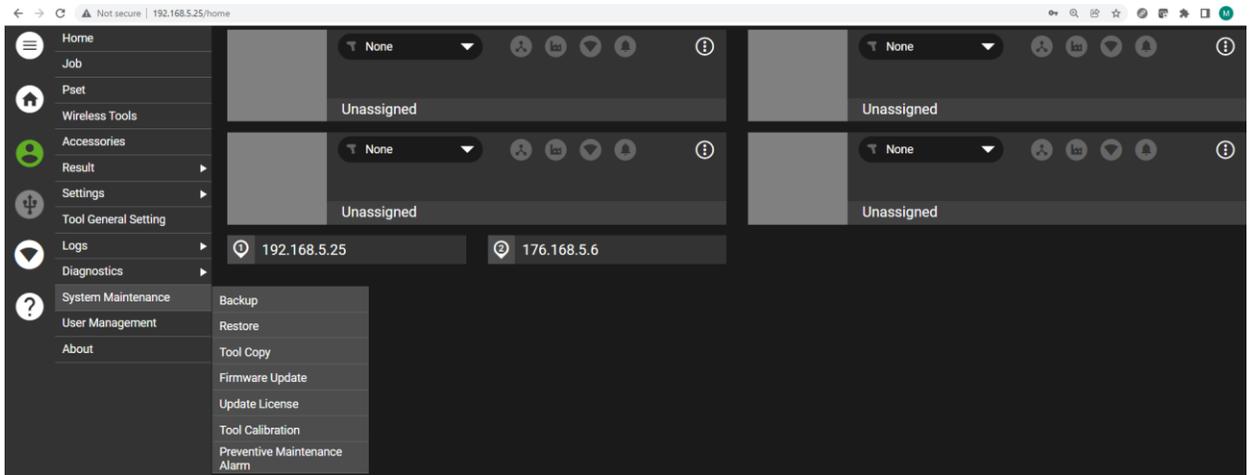


3. Select Update Type as Controller Update and select the Upload button.

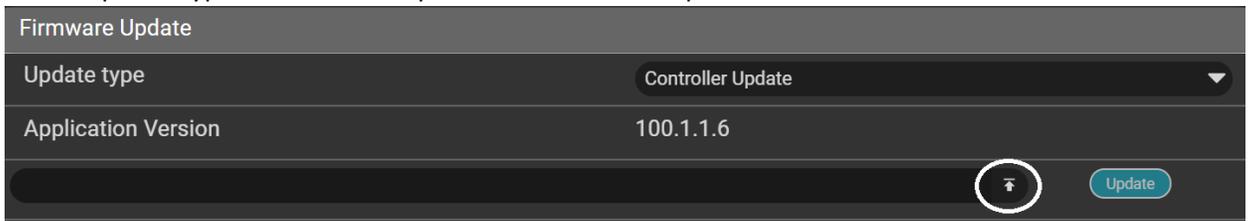

4. Browse and select the .irb file and select Open.

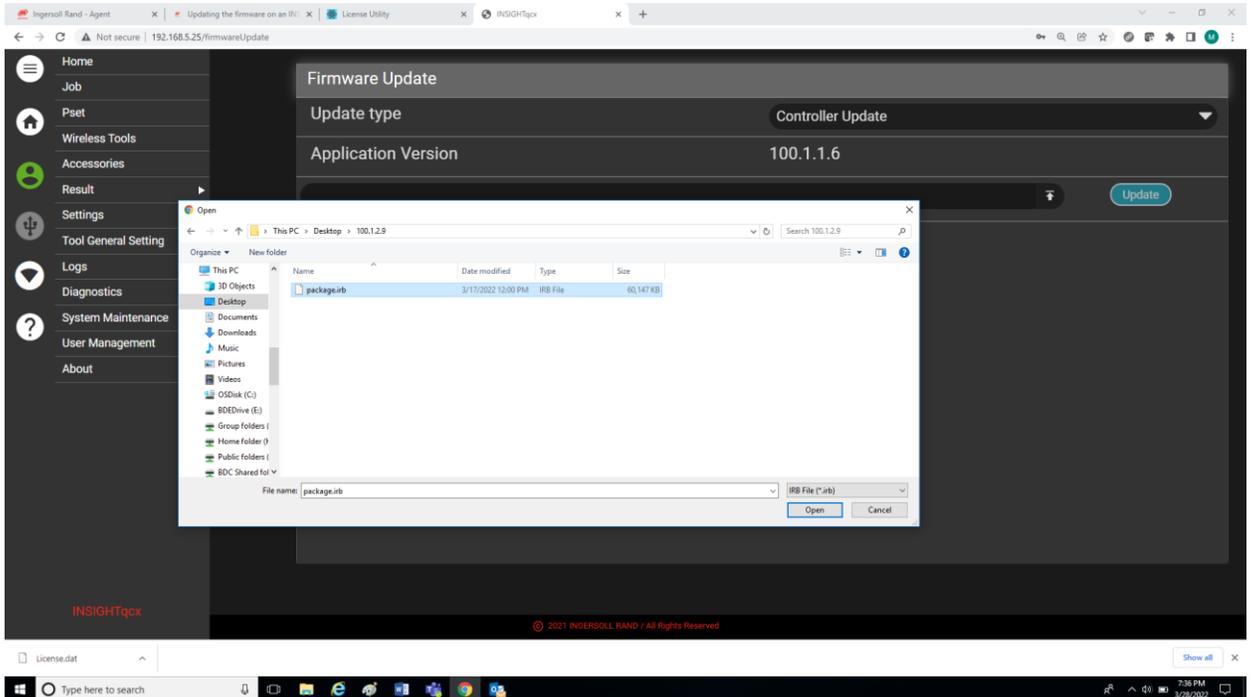

5. Select the Update button and follow the on-screen instructions.

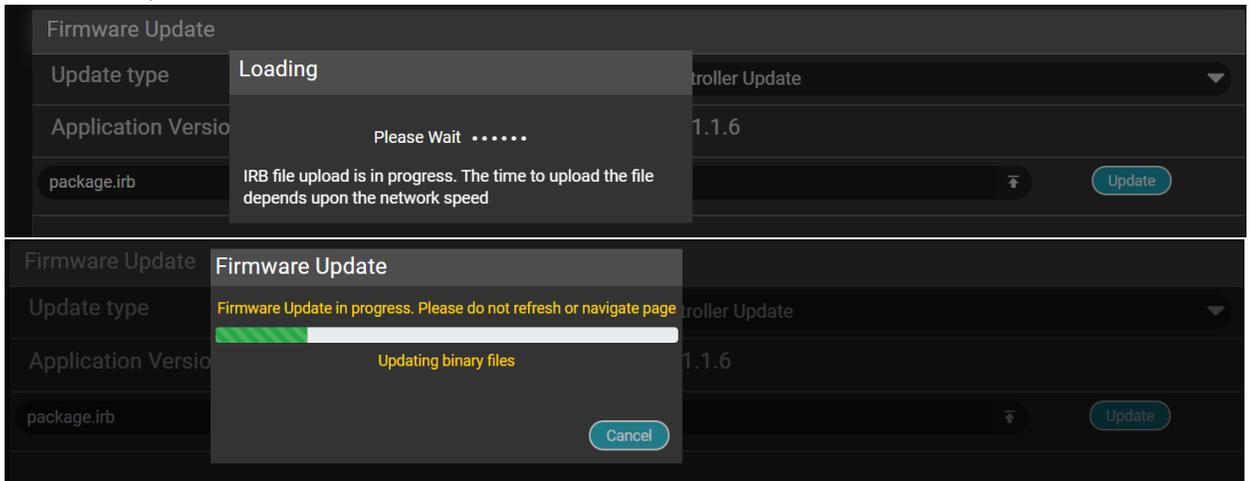

6. When complete the controller will automatically reboot.
7. Once rebooted, update the firmware on all tools.