

PFOP MIDs

MID	Description
0001	Communication Start
0002	Communication Start Acknowledge
0003	Communication Stop
0004	Command Error
0005	Command Accepted
0006	Application data message request
0008	Application data message subscription
0009	Application data message unsubscribe
0010	PSET ID upload request
0011	PSET ID upload reply
0012	PSET data upload request
0013	PSET data upload reply
0014	PSET selected subscribe
0015	PSET selected
0016	PSET selected acknowledge
0017	PSET selected unsubscribe
0018	Select PSET
0019	Set Batch Size
0020	Reset Batch Counter
0030	Job ID upload request
0031	Job ID upload reply
0032	Job data upload request
0033	Job data upload reply
0034	Job info subscribe
0035	Job info

MID	Description
0036	Job info acknowledge
0037	Job info unsubscribe
0038	Select Job
0039	Job restart
0040	Tool data upload request
0041	Tool data upload reply
0042	Disable tool
0043	Enable tool
0050	Vehicle ID Number download request
0051	Vehicle ID Number subscribe
0052	Vehicle ID Number
0053	Vehicle ID Number Acknowledge
0054	Vehicle ID Number Unsubscribe
0060	Last tightening result data subscribe
0061	Last tightening result data
0062	Last tightening result data acknowledge
0063	Last tightening result data unsubscribe
0064	Old Tightening Result Upload Request
0065	Old Tightening Result Reply
0070	Alarm subscribe

MID	Description
0071	Alarm
0072	Alarm acknowledge
0073	Alarm unsubscribe
0080	Read time upload request
0081	Read time upload reply
0082	Set time
0113	Flash Green Light*
0127	Abort Job
0128	Job Batch Increment
0129	Job Batch Decrement
0130	Job Off
0150	Identifier Download Request/Reply
0250	Selector Socket Info Subscribe
0251	Selector Socket Info
0252	Selector Socket Info Acknowledge
0253	Selector Socket Info unsubscribe
0900	Trace curve data message
0200	Set externally controlled relays
0210	Status externally monitored inputs subscribe
0211	Status externally monitored inputs

MID	Description
0212	Status externally monitored inputs acknowledge
0213	Status externally monitored inputs unsubscribe
0214	IO device status request
0215	IO device status reply
0044	Disconnect tool request
0074	Alarm acknowledged on torque controller
0075	Alarm acknowledge ack
0076	Alarm Status
0077	Alarm Status acknowledge
0078	Ack alarm on controller