
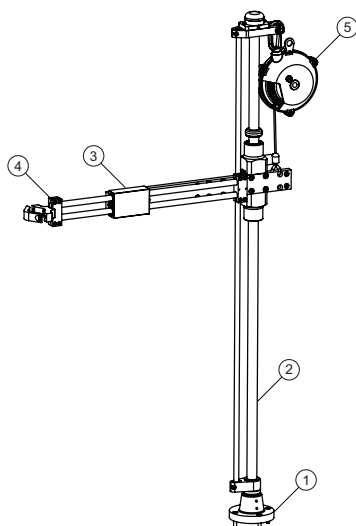
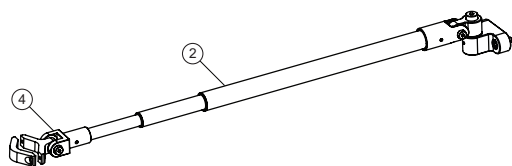
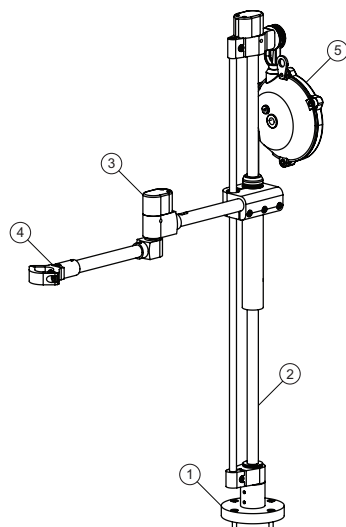


TA, TT, TL Series, Torque Arm - Diagrams

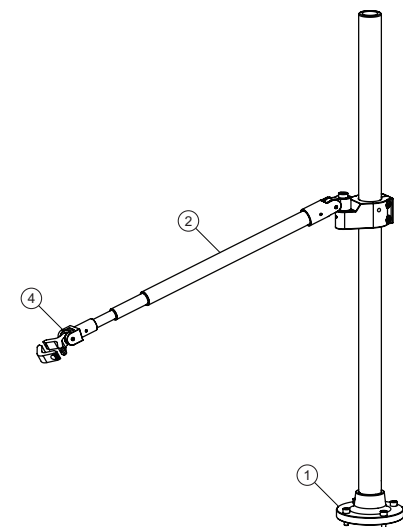

(Dwg. TL-TA-PLM-1)

TA, TT, TL Series, Torque Arm - Parts List

Item	Part Description	Part Number								
		TA19B	TA02B	TA07B	TT10W	TT19W	TT19B	TT19B-L	TL15B	TL30B
1	Base Assembly	TK-TA-BA1	TK-TA-BA2	TK-TA-BA2	N/A	N/A	TK-TT-BA1	TK-TT-BA1	TK-TL-BA1	TK-TL-BA1
2	Reaction Pole Assembly	TK-TA-RP1	TK-TA-RP2	TK-TA-RP2	N/A	N/A	TK-TT-RP1	TK-TT-RP1	TK-TL-RP1	TK-TL-RP1
3	Torque Arm Assembly	TK-TA-PA1	TK-TA-PA2	TK-TA-PA3	TK-TT-PA1	TK-TT-PA2	TK-TT-PA3	TK-TT-PA4	TK-TL-PA1	TK-TL-PA2
4	Clamp Assembly	TK-TA-PC1	TK-TA-PC2	TK-TA-PC1	TK-TA-PC3	TK-TA-PC4	TK-TA-PC4	TK-TA-PC4	TK-TA-PC1	TK-TA-PC1
5	Spring Balancer	TK-BLD-5	TK-BLD-1.5	TK-BLD-3	N/A	N/A	N/A	N/A	TK-BLD-5	TK-BLD-3

Parts and Maintenance

When tool life has expired, it is recommended that the tool be disassembled, degreased and parts separated by material for proper recycling.

Tool repair and maintenance should only be carried out by an Authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** office or distributor.

Related Documentation

Manuals can be downloaded from [ingersollrand.com](https://www.ingersollrand.com)

For additional information, refer to:

Product Safety Information Manual 45546967

Product Information Manual TL-TA-PIM

User Information Manual TL-TA-UIM