

Programming an RTS tool from the Insight Connect Mobile App

1. Plug the battery into the tool. Press the button next to the radio icon to enter the Communication Selection screen.




2. Navigate to the Bluetooth icon from the tool backcap.




3. Press the button next to the Check Mark to put the tool into Pairing Mode.




4. Launch the Insight Connect Mobile App and select Connect to the Tool.

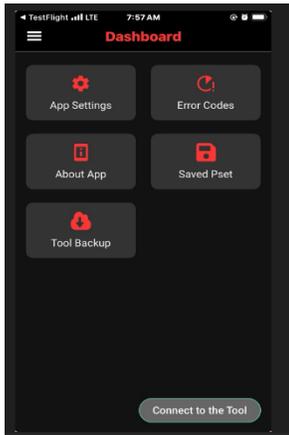


5. Select Available Tools.

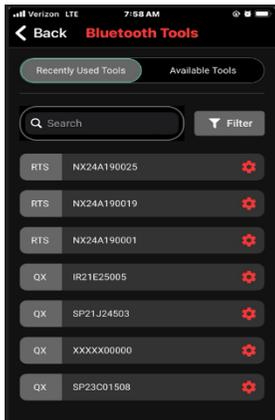


6. The tool you are trying to Pair will populate.

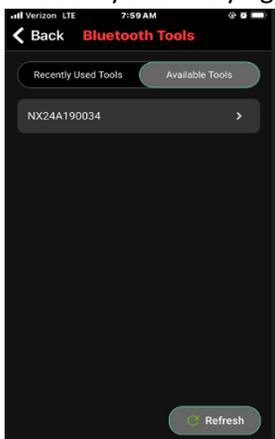


7. Click on the tool and you will get the following message.

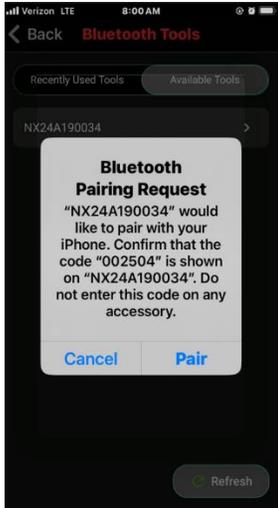


8. Select Pair and select the Check button on the tool to Confirm. The tool is now connected to the Insight Connect App.

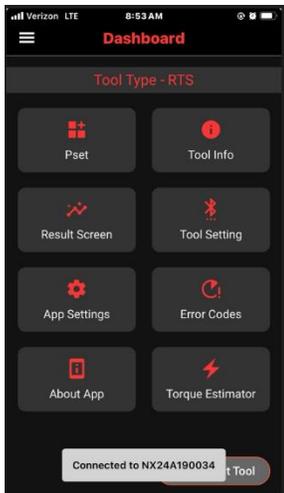


9. Once the tool is connected click on the Pset button to program up to 8 Psets.

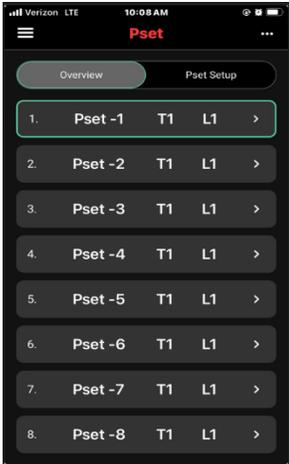


10. Click on the Pset you want to program and click Edit Pset.

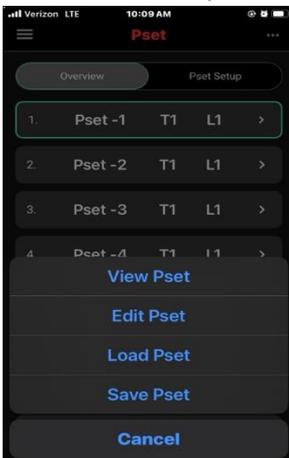


11. You will see the following screen.

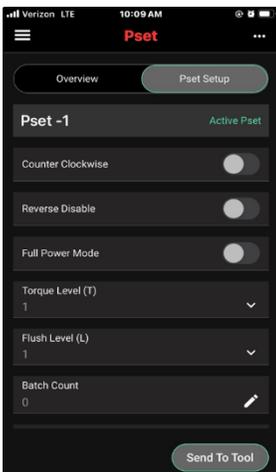


12. At a minimum, Direction, Torque Level and Flush Level should be programmed.

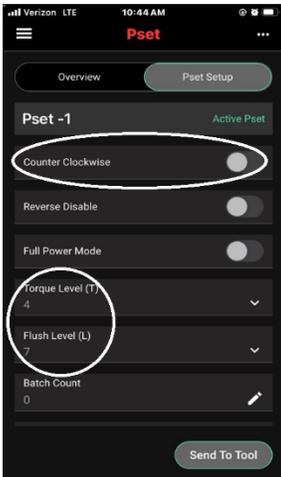

13. Click Send To Tool.

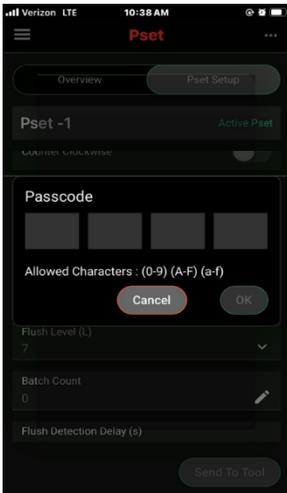

14. Enter the Password (Default Password – 0000) and select OK. Settings are sent to the tool.

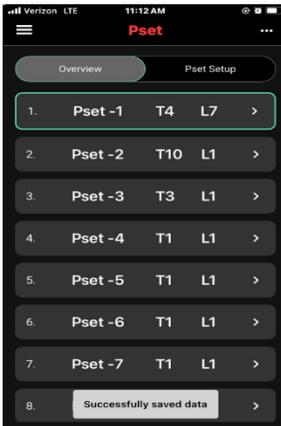


15. To verify if the settings are correct for the application, run the tool on some parts and audit the fasteners.


16. Below are some useful definitions.

- a. **Reverse Disable** – The tool only operates in the tightening direction.


Why it is useful: In some production environments, operators are instructed to only install fasteners, and never to remove or rework fasteners themselves. When Reverse Disable is on, the tool only operates in the tightening direction, thereby eliminating the opportunity for it to be used for fastener removal or rework.

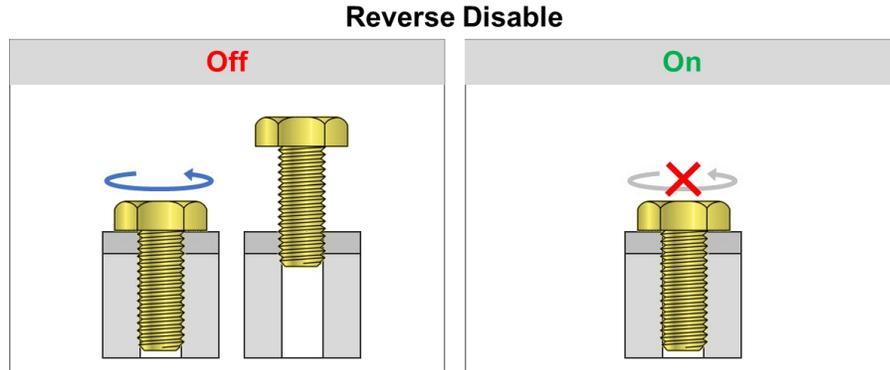

- b. **Full Power Mode** - When enabled, the tool will run in full power. Upon disabling the feature, user can setup the Pset configuration.
- c. **Flush Level Setting (L1 – L7)** – This setting is the level of sensitivity used for determining when the flush point has been reached. Since all joints are different, there are 7 options available to choose from, so that the tool’s determination of flush point may be best aligned with the actual joint behavior.
- i. L1 - L2 have the lowest sensitivity and are the least discriminating to reach. They are best for hard joints and joints that reach the snug point immediately following the completion of rundown.
 - ii. L3 – L5 have medium sensitivity. They are best for softer joints and joints that involve drawing parts together.
 - iii. L6 – L7 have the highest sensitivity and are the most discriminating to reach. They are best for joints that must overcome high prevailing torque prior to arriving at the snug point.

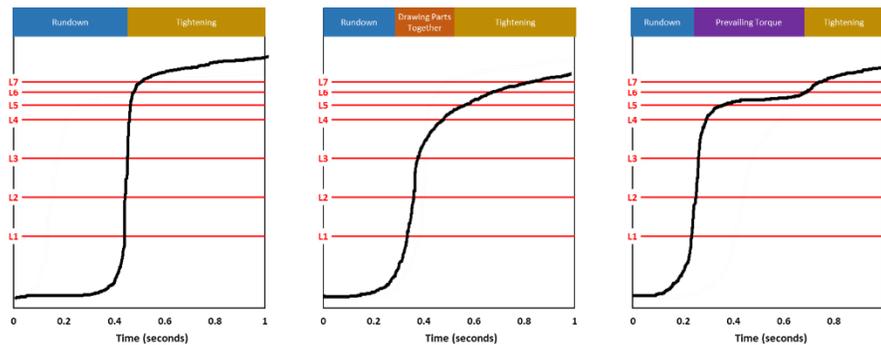

- d. **Torque Level Setting (T1 – T40)** – This setting is the duration after flush point detection during which the tool delivers pulses of torque to the fastener before automatically shutting off. There are 40 options to choose from, so that the tool’s delivered torque may be best aligned with the torque that the application requires.

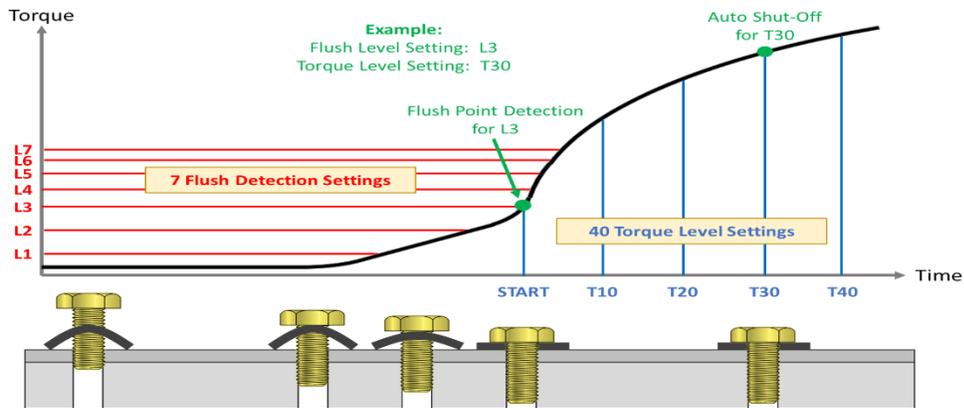

- e. **Flush Detection Delay** – The tool delays flush detection for the specified period of time at the beginning of a cycle.

Why it is useful: If there are loads on the fastener prior to it becoming seated, those loads may cause the flush detection algorithm to enable prematurely. When it is known that flush detection is not to occur until after a specific period of time, setting the Flush Detection Delay to that time will disable flush detection until the time has elapsed.


- f. **Re-Hit Prevention** – The trigger is disabled for a specified period of time following the completion of each tightening.

Why it is useful: When tightening a series of fasteners in rapid succession, an operator can fail to advance to the next fastener and attempt to tighten the same fastener twice. When it is known that advancing to the next fastener should take at least a specific period of time, setting Re-hit Prevention to that time can help to prevent a re-hit condition.

- g. **Cross-Thread Reduction** – The tool turns two revolutions in the loosening direction prior to executing a tightening, for better thread alignment.

Why it is useful: With some applications, running a fastener in the loosening direction prior to a tightening can help reduce the risk of cross-threading, by burnishing the first threads in the joint and giving the operator the ability to take control of the thread alignment.


Cross-Thread Reduction

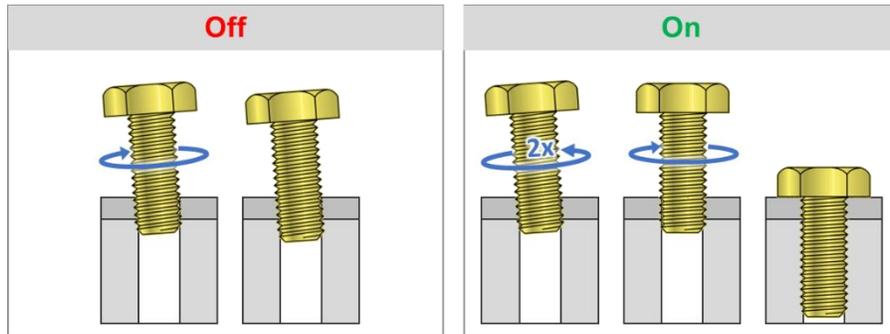

- h. **Re-hit Detection** – The tool immediately shuts off and shows a cycle-fail indication if it senses that there is high load on the fastener at startup, which could indicate that the fastener was previously tightened or has been cross-threaded.

Why it is useful: During a common fastening, there is a period of rundown during which the fastener normally encounters very little resistance. If high resistance is encountered when it is not expected, it could mean that the fastener was previously tightened or that it has been cross-threaded. With Re-hit Detection enabled, the tool shuts down when high resistance is sensed and gives indication to the operator that the fastener needs attention.


Re-Hit Detection

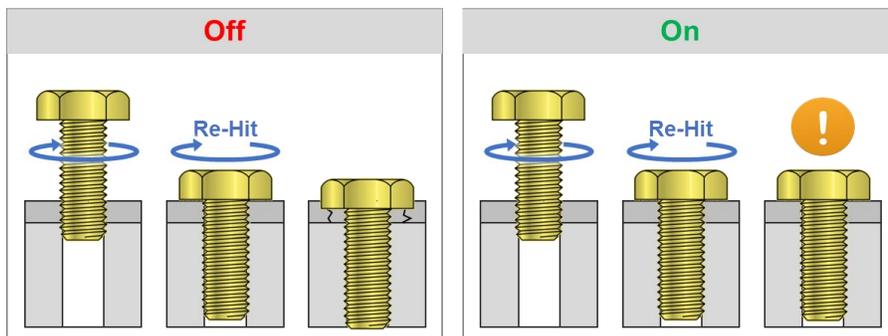

- i. **One Speed** - The tool operates at full speed only.

Why it is useful: Repeatability is maximized when fasteners are tightened exactly the same way every time. One Speed provides assurance that the tool only operates at full speed, so that there is no opportunity for variation to be introduced by teasing the trigger.


One Speed

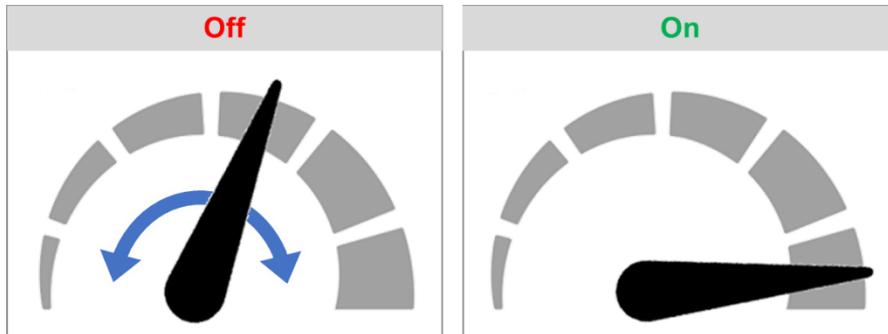


- i. **Soft-Start** – Tool speed ramps up more gradually at the beginning of a cycle.

Why it is useful: The gradual speed increase of soft start can provide the operator with more control for getting fasteners started.


Soft Start

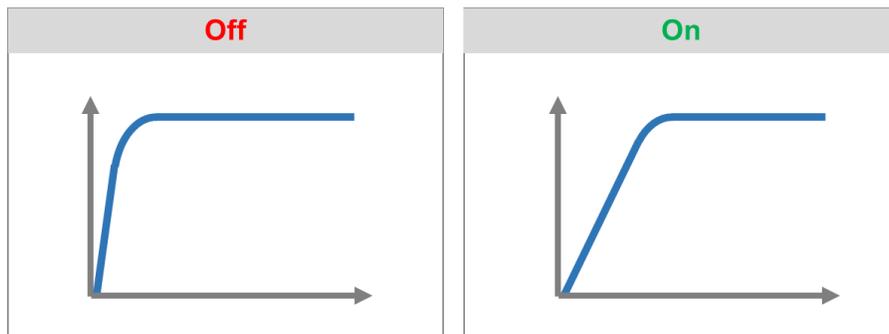


17. The Mobile App has a Torque Estimator feature that can assist the user in their initial Pset setup.
18. Go to the Dashboard.

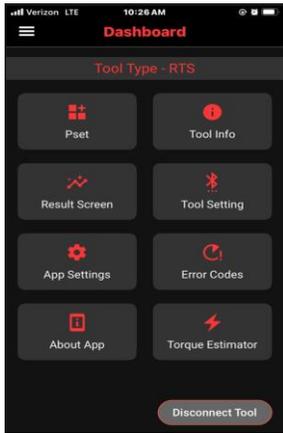


19. Select Torque Estimator.

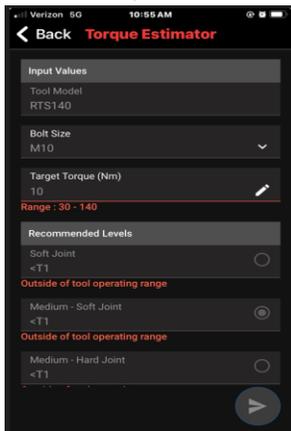


20. Enter the Target Torque.

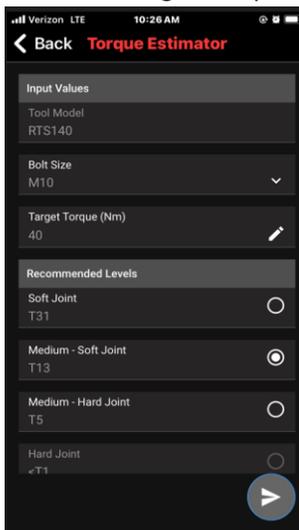


21. Select the Joint Type to set the Recommended Levels.

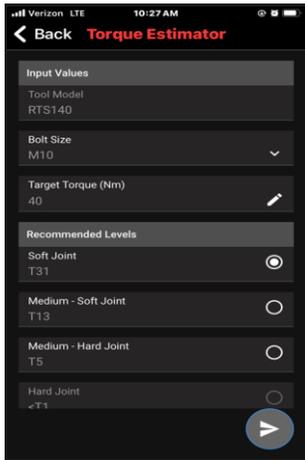


22. Select the Right Arrow at the bottom of the screen. A new screen will populate to Apply the settings to the desired Pset.

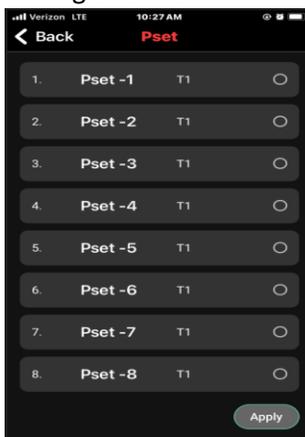


23. Mark the desired Pset.

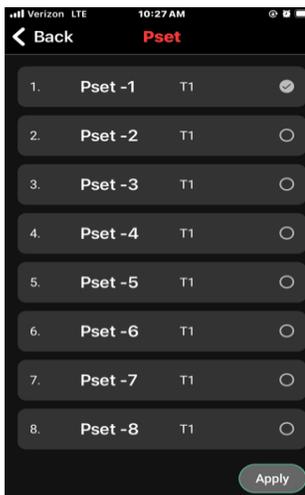

24. Select Apply. You will be prompted to enter a Password.

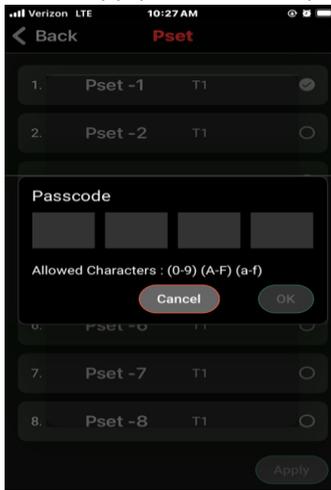

25. Enter 0000 by default.

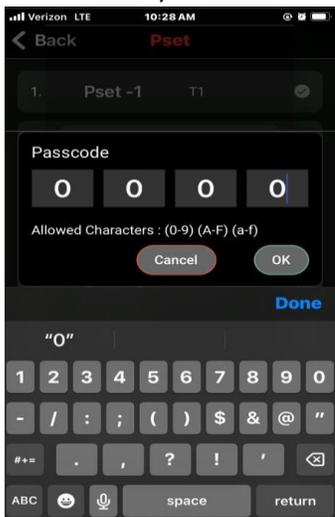

26. Select OK and verify that the settings were applied to the desired Pset.

